
REMOVE AND REPLACE SC PULLEY

WITH COUNTERBORE SCREW

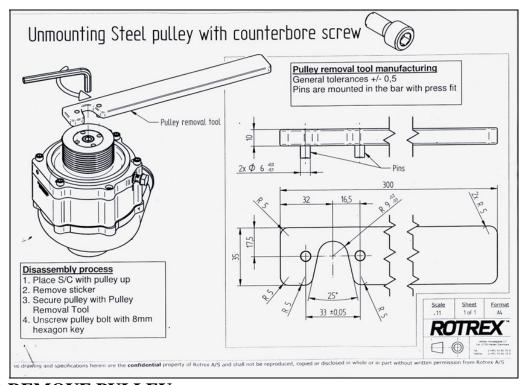

TO REMOVE PULLEY:

-Wrap an old belt around pulley and hold with channel lock pliers. Use 8mm allen socket to pull bolt counter clockwise.

Make sure that pulley does not slip, this will loosen shaft internally and cause damage to the blower.

TO REPLACE PULLEY:

- -Install pulley on blower and ensure collar on the pulley back is seated into the blower.
- -Once seated, light oil the threads of the allen bolt and hand tighten until snug.
- -Wrap an old belt around pulley to help protect pulley grooves
- -With a channel lock pliers, grasp pulley
- -Tighten allen bolt to 37 Ft/Lbs.

DO NOT USE AIR TOOLS TO TIGHTEN OR REMOVE PULLEY. WILL UNLOCK BLOWER SHAFT INTERNALLY