




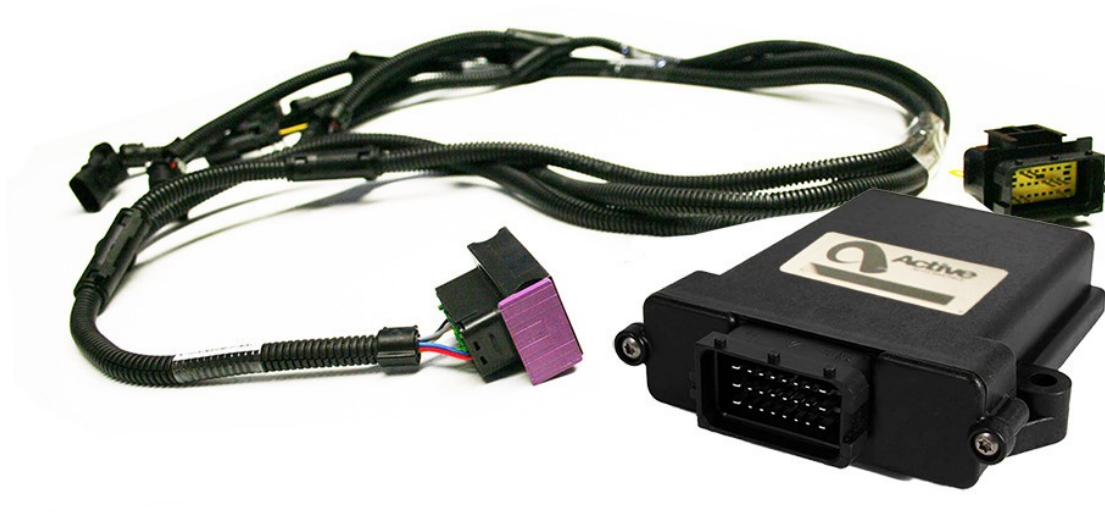


How to install Active 8 Module in a S63TU Engine F10 M5

- Open the hood
- Turn the ignition off.
- Remove the ignition key
- Close and lock all doors
- Do not open any doors while installing the Active 8 Module kit.
- Wait for 5 minutes before beginning the installation

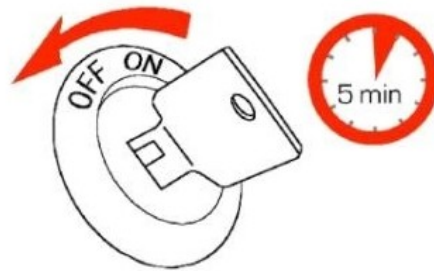


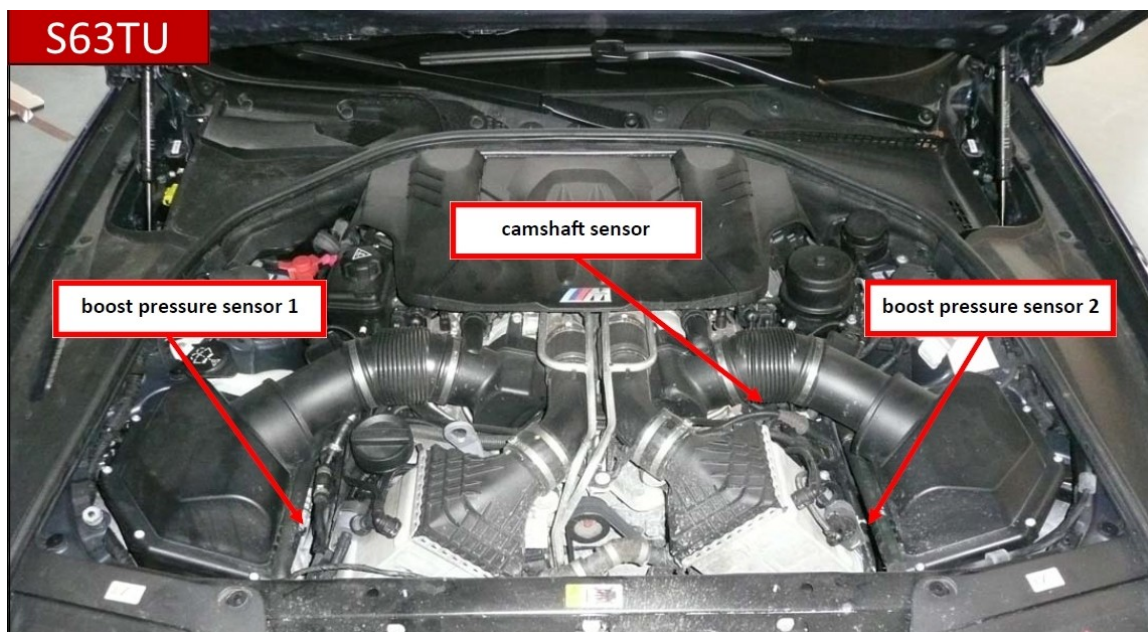


The Active 8 Module use these 3 connections: boost pressure sensor 1, boost pressure sensor 2 and the camshaft sensor. Be aware that the harness is labeled with the proper connector name so just follow the label names and connect the harness connector to each sensor in the engine.

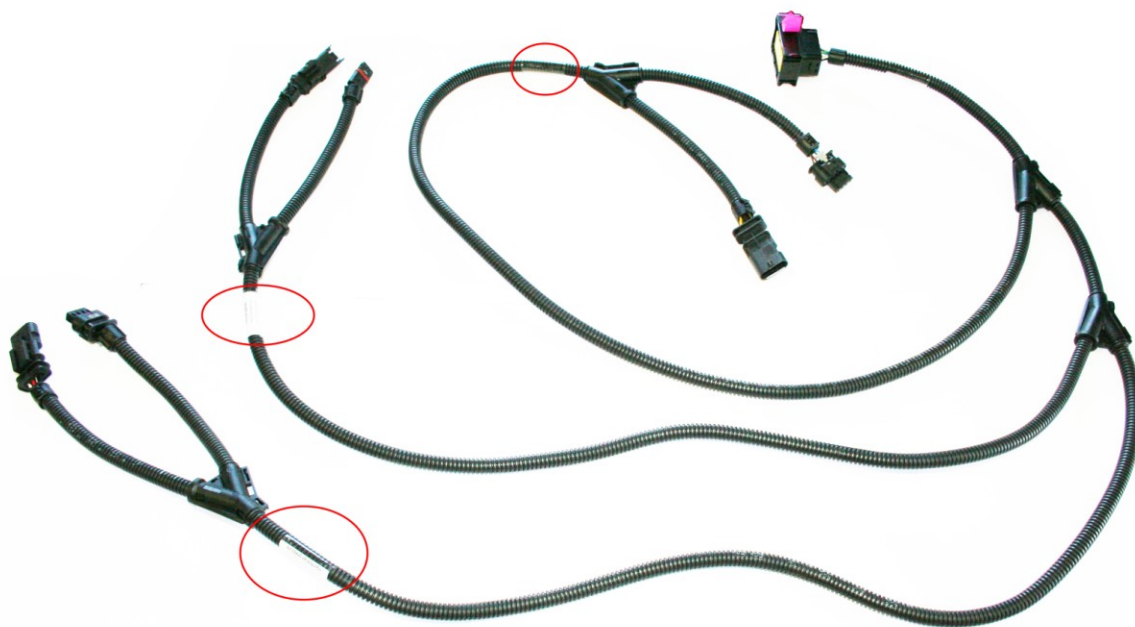


- **Boost pressure sensor:** remove the Air box with the Air filter, in the bottom of the intercooler you will find the boost map sensor (3), unplug the wire from the boost sensor and plug the proper connector from the Active Module hardness.

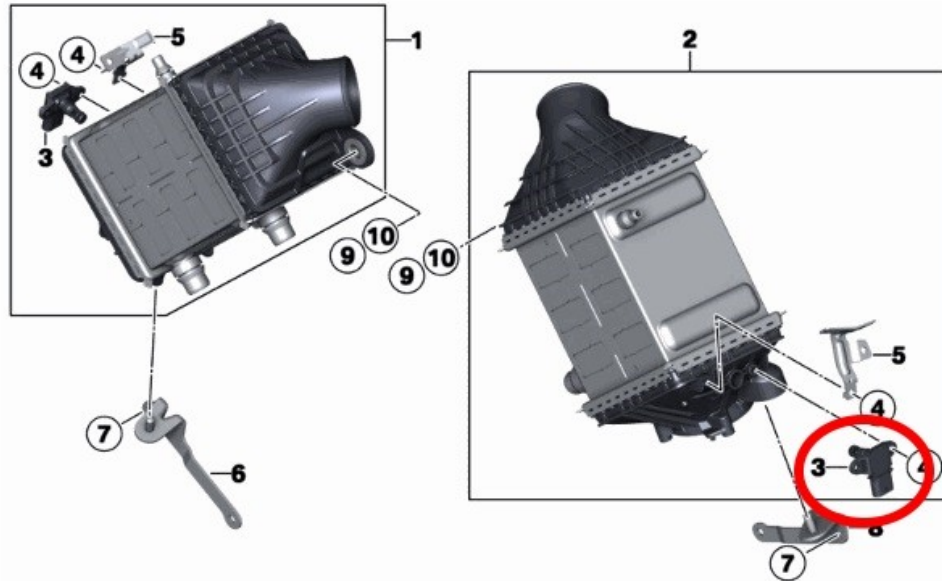


- **Camshaft position sensor:** Unplug the wire from the camshaft position sensor (12) and plug the proper connector from the Active Module Hardness.

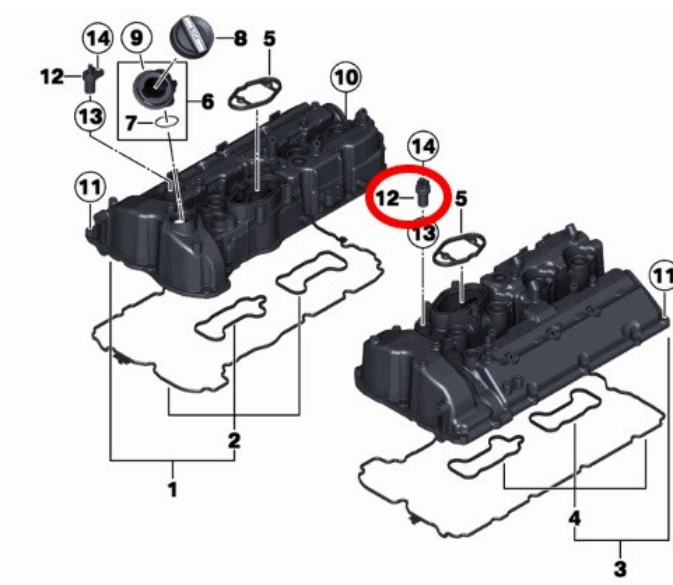

- Connecting the Active 8 Module

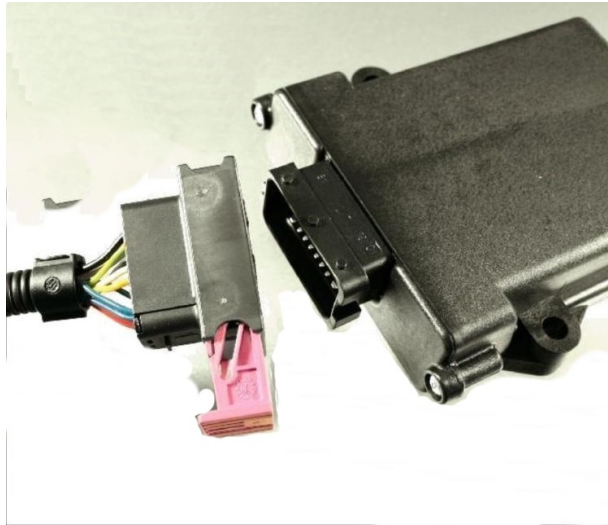


- Back to Stock Module: this bridge module will go back the factory settings for the vehicle performance.

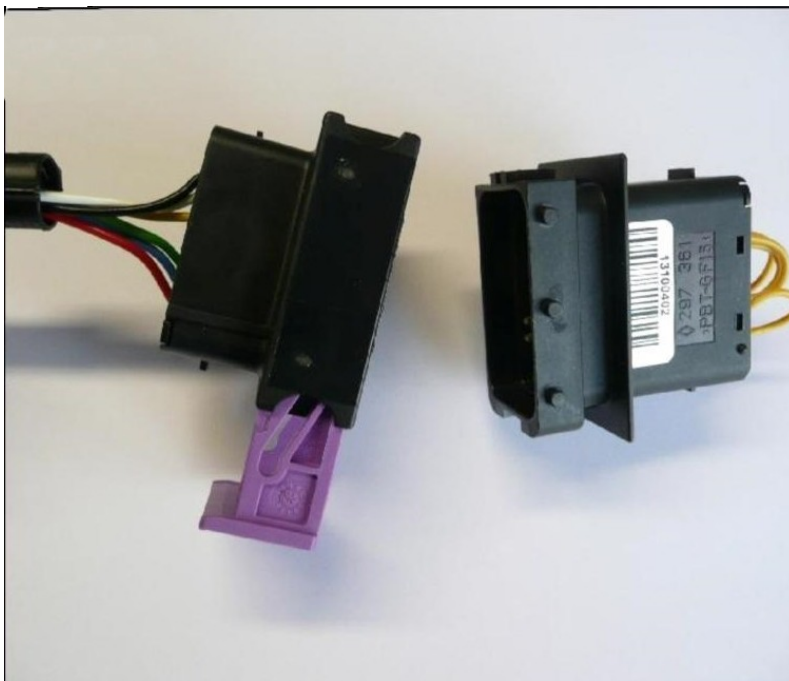



- Location of the Active 8 Module

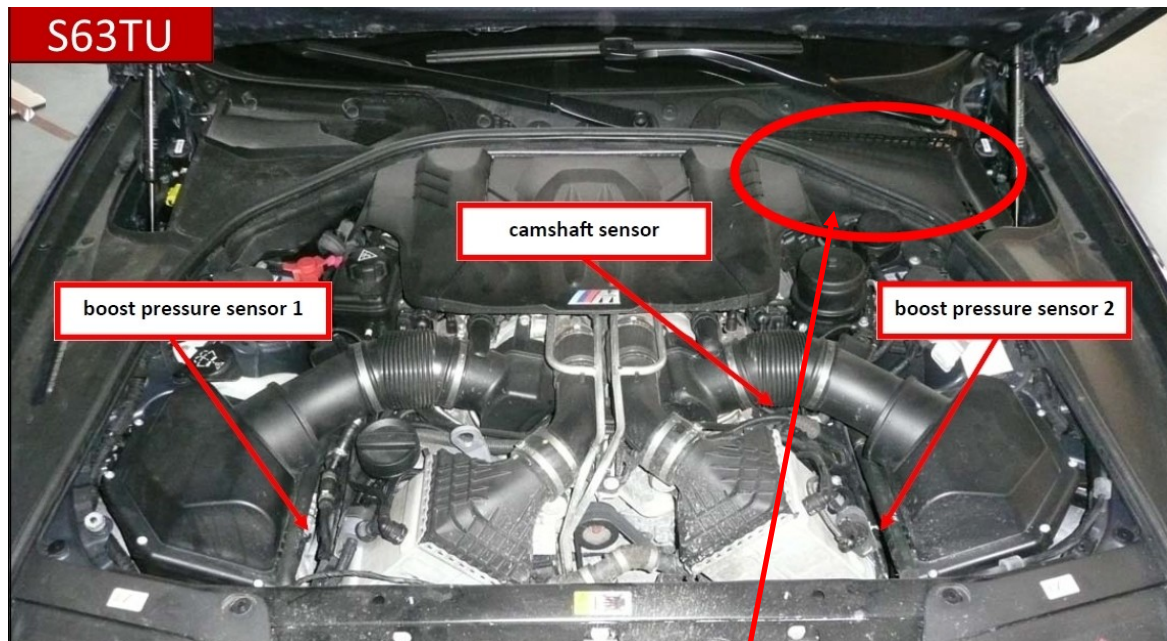

Place the Active 8 Module in the driver side underneath the highlight section, do not drill a hole, there's a hole already just use the provide bolt.





Thanks for purchased a Active 8 Module

Active Autowerke
Software support
Voice: 305-233-9300 ext 223

9940 S.W. 168 Terrace
Miami, Florida 33157
Web: www.activeautowerke.com