



INSTRUCTION

INTERCOOLER SPORT GEN2 UPGRADE BMW E9/8 335i




Installation: BMW factory OE instructions can be used.

Active Autowerke Gen 2 Sport is a larger direct replacement to the factory intercooler. In and out piping uses back the factory quick release. It is recommended to use a lift to help perform installation or use of professional grade jack stands to properly raise and secure car

Tools:

- 8mm nut driver or socket
- Pick or Flat head screwdriver
- Torx # 25

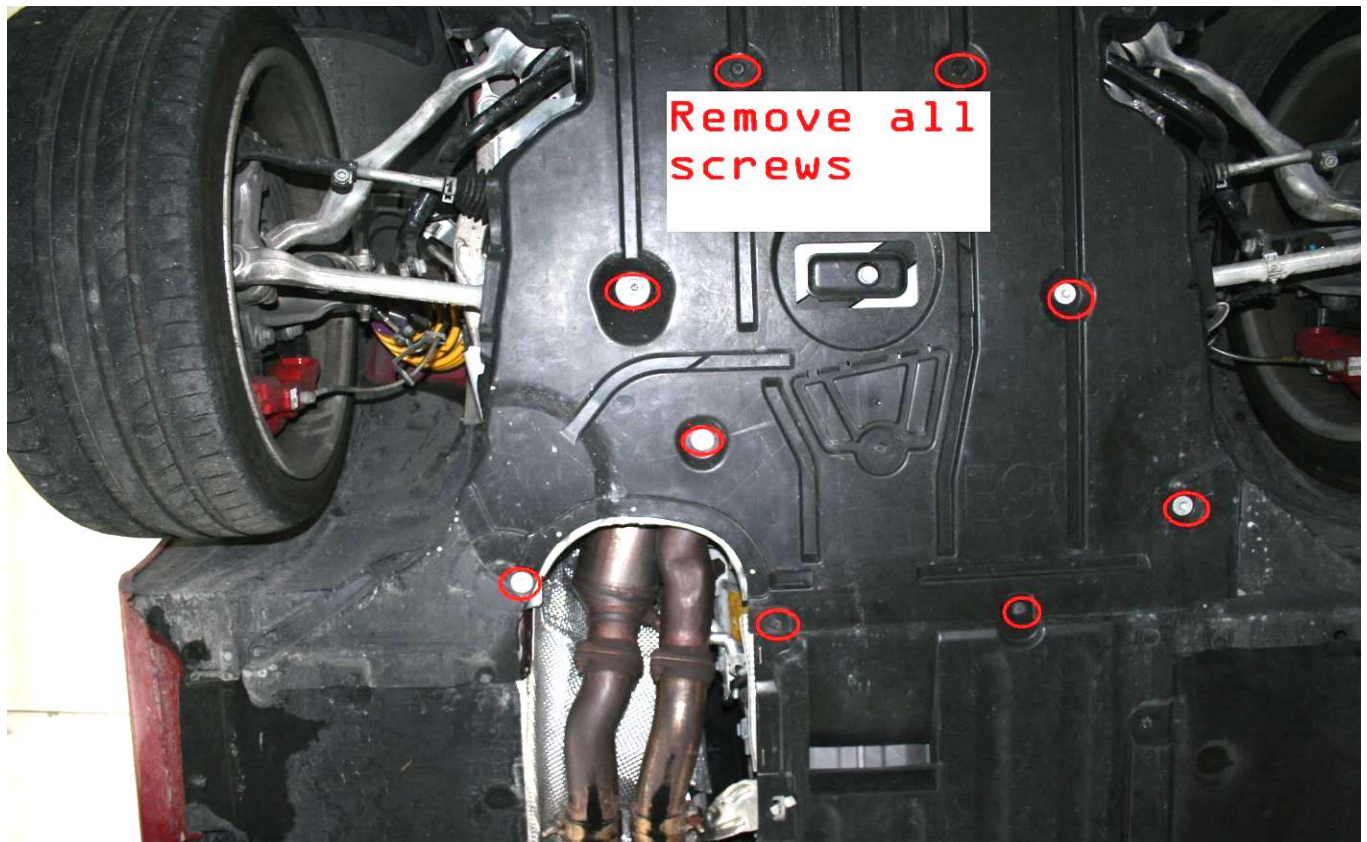

Remove under panel by removing all 8mm head screws.



NOTE: Not all screws are shown in picture above.



Pull release clips for left and right intercooler pipes. Pull back pipes away from intercooler.
May be tight due to rubber O ring.



Remove T25 Torx mounting screws on the left and right side of the intercooler.

These screw will be used back to mount the intercooler under panel.



Pull down on intercooler while stretching spoiler to let intercooler pass.



Fit new intercooler into opening aligning factory hoses into intercooler openings and fan shroud into bottom brackets. Due to increased size you may have to have help to stretch spoiler to get intercooler to enter space.



Make sure pipes enter intercooler all the way.



You should be able to see inside of grooves for clip.



Make sure clip is fully seated in groove.



Use back original mounting holes and Torx screws for AA intercooler.

Reinstall under panel (make sure center screw does not touch intercooler, if it can puncture intercooler leave out)





Thank you for purchasing one of the finest performance upgrades made for the BMW E9/8 series Twin Turbo.

For questions or concerns call 305.233.9300.