



INSTRUCTIONS

**BMW E92 335i
2007 -**

Active Autowerke All Stainless Exhaust System – GEN 2

Tools Needed:

- 11mm, 13mm, 17mm Socket
- 3/8" Ratchet, extension
- 11, 13, 17mm Wrench
- Rubber Mallet

Congratulations on the Active Autowerke all stainless exhaust for the BMW 335i Twin Turbo. Please read and follow these instructions before installation.

It is best NOT TO TIGHTEN any clamps or bolts initially but just have the exhaust system SNUG until fully installed. After proper clearances and spacing are made, one can then secure all clamps and hardware for that final fitment.


DO NOT USE AIR TOOLS TO TIGHTEN CLAMPS



Active Autowerke All Stainless Exhaust System



Separate the factory exhaust from the down pipes
Remove entire exhaust system

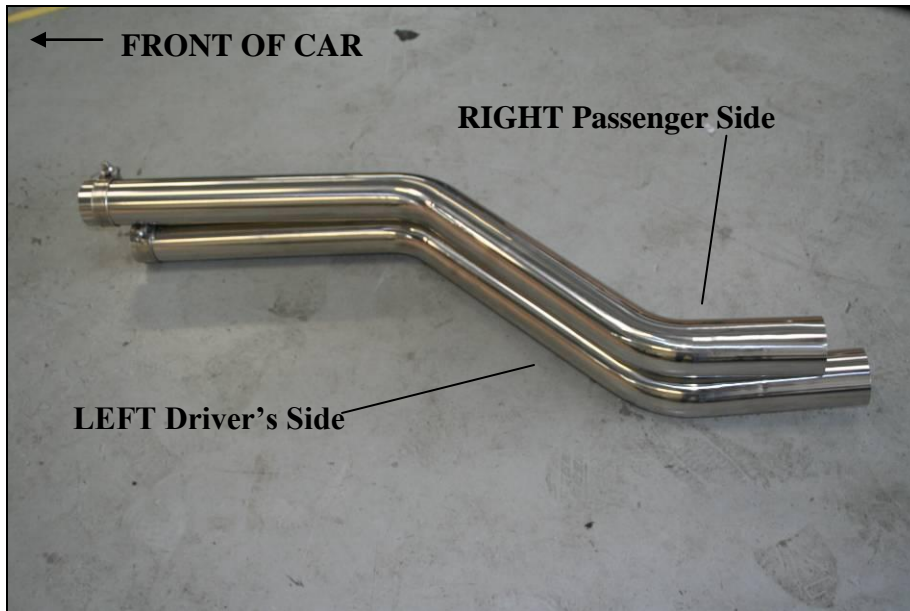

Install (2) "S PIPES" above to the factory down pipes coming from the turbo

- "S PIPES" look similar, but they are of different lengths

- Right (Passenger Side) "S PIPE" is longer in the front section of pipe that connects to the engine. See picture above



View of "S PIPES" installed

-DO NOT tighten exhaust clamps at this time.


Recommend to tighten all clamps after complete exhaust is installed and aligned properly



Another view of "S PIPES" installed



"X PIPE"

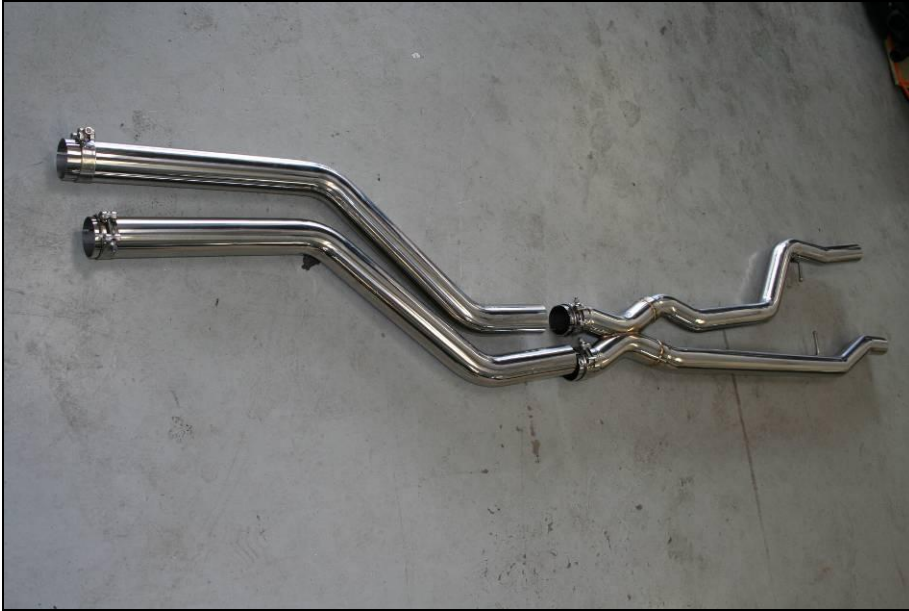

"S PIPES" to "X PIPE"



When mounting "X PIPE" make sure that mounting tabs faces down



"X PIPE" mounted to "S PIPE"



Another View



Mount "X PIPE" tabs to rubber mounts located around differential

Left (Driver's Side)



Mount "X PIPE" tabs to rubber mounts located around differential

Right (Passenger's Side)



A rear view of "X PIPE" installed




Muffler REAR BAR with mounting brackets


-Mount Muffler REAR BAR before installing Left and Right REAR mufflers to "X PIPE"




With Muffler REAR BRACE installed, it makes for a much easier installation of the rear mufflers later

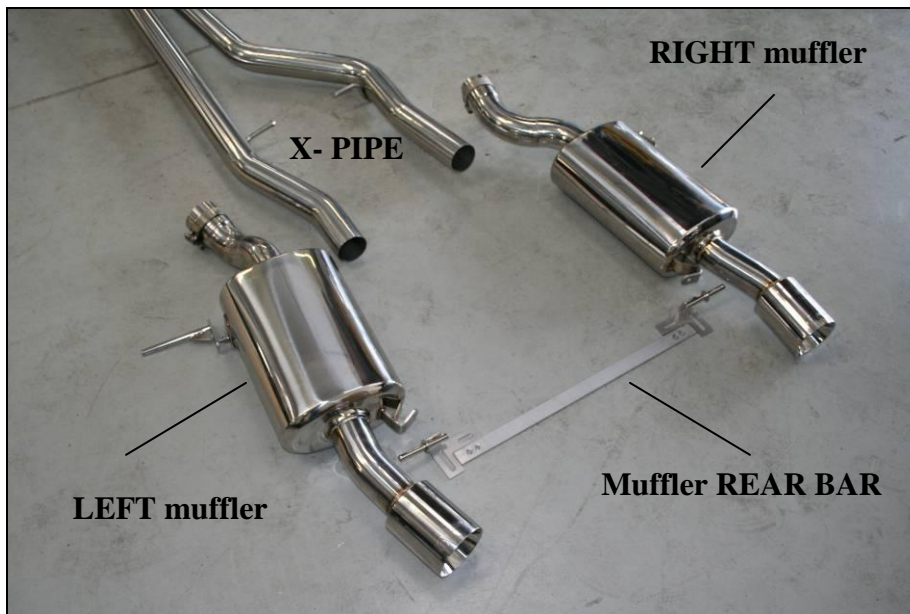

Both REAR mufflers

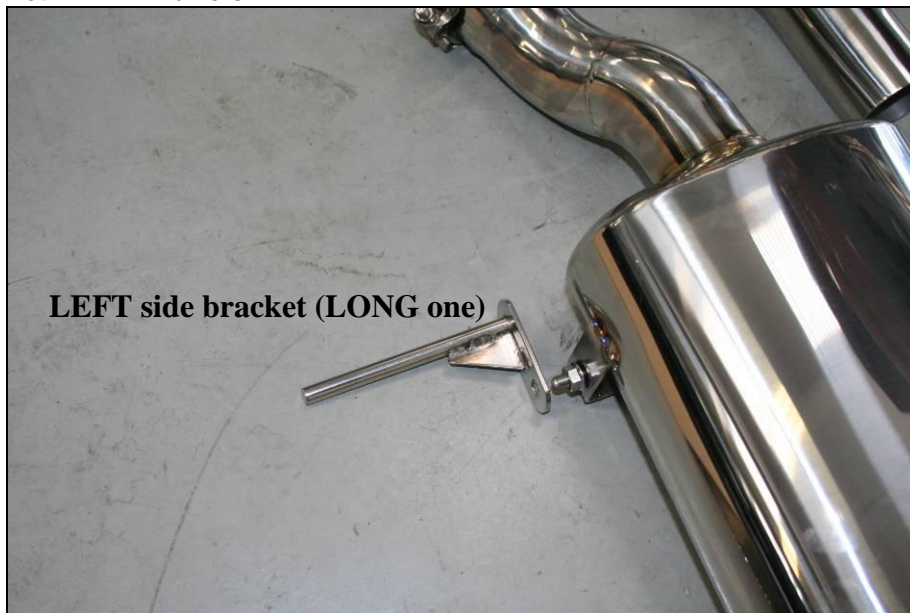


Left muffler

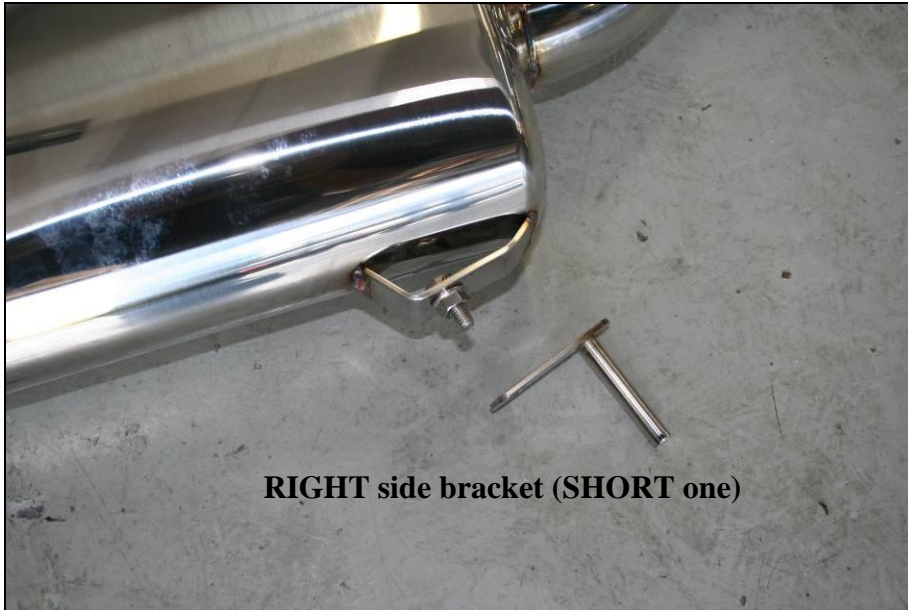

RIGHT side bracket (SHORT one)


Right Front muffler bracket (SHORT one)

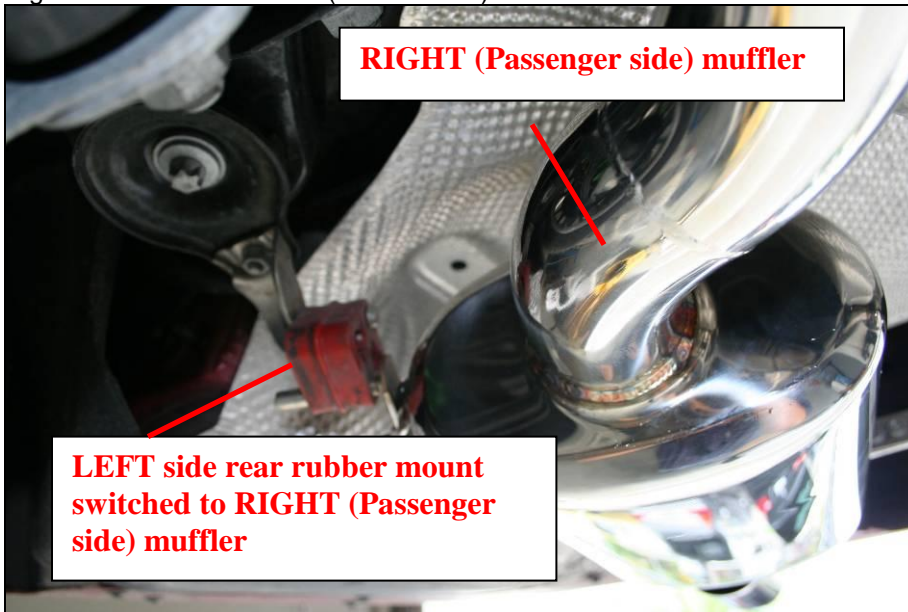

RIGHT (Passenger side) muffler

**LEFT side rear rubber mount
switched to RIGHT (Passenger
side) muffler**

Take the next 2 rear mounts that are close to the rear wheels and **swap them from left to right**
 -So the mount that was on the right side now goes on the left side
 -The same goes for the left mount
 -Bolt them into place. These 2 mounts will hold the front section of the new rear muffler cans in place.
 -Install the rear muffler cans in place and mount them.

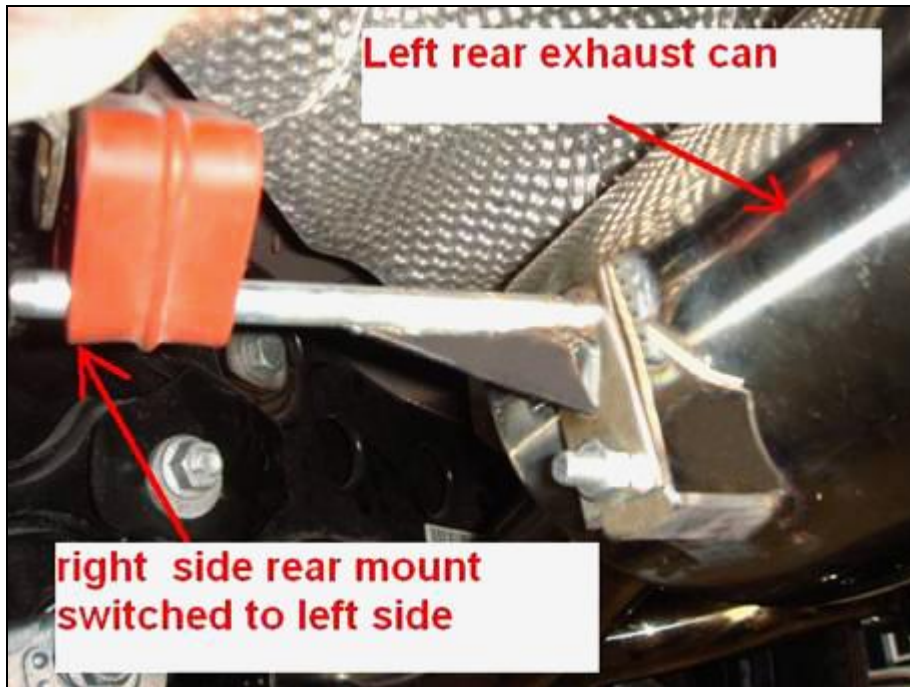

LEFT (Driver's side) muffler



Mount clamps and snug fit.

-Do the same for the other side

-DO NOT tighten exhaust clamps at this time.

Recommend to tighten all clamps after complete exhaust is installed and aligned properly



Mount rear mufflers to MUFFLER REAR BAR

- Use 13mm and 17mm wrenches

- Make sure the link bar between the muffler cans is bolted in place as shown in the picture

- Shown right muffler installed



Left muffler mounted



Underneath view




Check clearances around differential area and adjust by twisting pipes

- Check for proper rear muffler tips alignment to rear valance opening both height and centering
- Make adjustment as needed then tighten all bolts and clamps
- Perform road test

Optional Instructions for BMW E93 335i Convertible

For the BMW 335Ci, there is a rear support brace installed by the factory. Use the (2 TALL – 10mm bushings) and (1 SHORT – 12mm bushing) supplied to properly space away this rear support brace with the bolts provided.

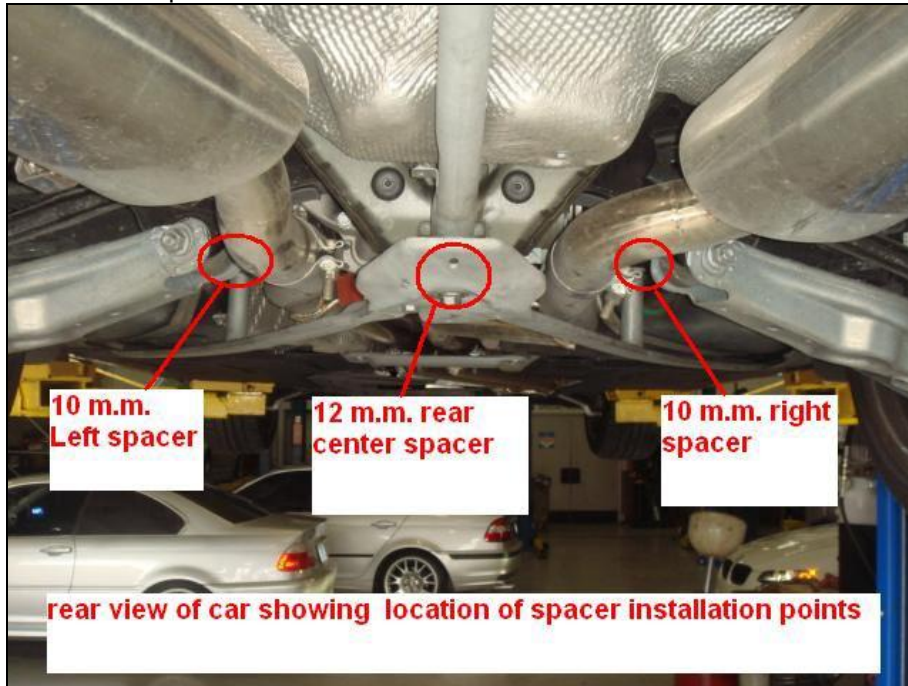

12 m.m. I.D. spacer installed at rear of support bar

