

Active Autowerke X6/X6M X5/X5M DME DME Removal Instructions

Tools Needed:

13mm socket

Small Flat Head Screwdriver

1. Turn the 4 13mm plastic nuts $\frac{1}{4}$ turn counterclockwise to release.



2. Now Turn the 3 13mm Plastic nuts to replace the panel. Also Unplug the electrical sensor




3. Release the two tabs inside the cowling. Then using a small flathead screwdriver, pry up on the inner pin to release the plastic rivet



4. Now remove the electronic box cover by first releasing the spring clips. Then using a small screwdriver release the three retaining tabs



5. Now Remove the five electrical connectors from the DME and slide the unit up and out

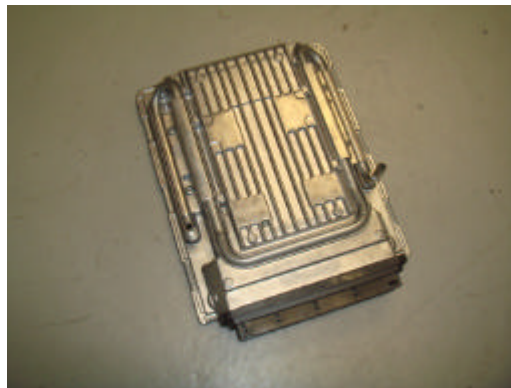

6. Make sure do not try and move the car once the DME has been removed. Do not place the Key fob in the car or turn on the ignition, this may cause the EWS system to go out of alignment

7. Now safely pack the computer and ship it to:

Active Autower
9940 SW 168th Terrace
Miami, FL 33157

Please Print and send the next page with your DME



Active
AUTOWERKE

**PRINT OUT
THIS FORM**

**SEND BACK
WITH ECU**

Customer's Name: _____

Shipping Address: _____

Phone Number: _____

E-Mail: _____

Invoice # _____

Model: _____ Year: _____ Trans: _____

V.I.N. _____

Engine type: _____

Engine Modifications : _____

Please ship your DME to:

Active Autowerke
9940 S.W. 168 Terrace
Miami, FL 33157
USA
305-233-9300

It is advisable to insure this package with your carrier of choice for a value of approximately \$1,000.00 USD.

International Customers are responsible to pay for all customs and duty charges. Instructions on the air bill should indicate this. If not, Active Autowerke has the right to either refuse the package or assess an estimation of the charges and will not release the reprogrammed DME until payment has been received.