



E60 M5 ECU Upgrade

Tools Needed:

T20 Bit
5 MM Allen Key
13 MM Socket

1. Open hood and find the passenger side Air-conditioner Microfilter Housing



2. Lift where shown and slide the plastic brace out to the right



3. Next Pry down the Metal Bar, Disconnect the two electrical connectors and release the 13mm plastic nut



4. Lift up and Remove the filter Box




5. Next Release the 4 13mm Plastic Nuts and Remove the T20 Screw. Remove the entire assemble to access the electronic box



6. Loosen the 5 5mm Allen Head Screws and Slide the white triangle to the unlock position. Now remove the cover



7. The DME is in the Back of the Box. Remove the two large black connectors by pulling the release tabs to the left and right

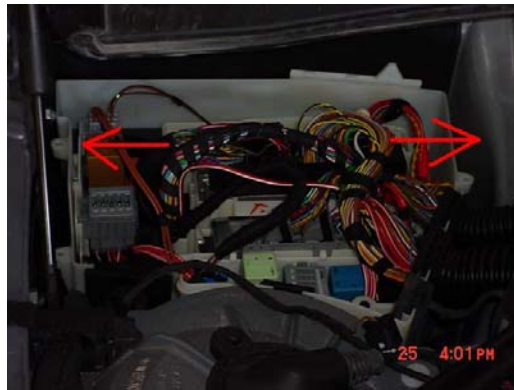

8. Pull Up on the ECU and remove it



8. The Ecu should look like this.



***** **DO NOT USE THE KEY OR ANYTHING IN THE** *****
CAR WHILE THE ECU IS UNPLUGGED

Customer's Name:

Shop's Name:

Address:

Address:

City:

State:

City:

State:

Phone:

Phone:

Alt. Phone:

Contact Person:

Ship ECU to: (circle one)

Owner

Shop

Invoice # _____ Model: _____ Prod Date: _____ Trans: _____

V.I.N. # _____ Engine Type: _____

Please list any performance upgrades:

Please ship your ECU to: Active Autowerke
9940 S.W. 168 Terrace
Miami, FL 33157
USA

305.233.9300

It is advisable to insure this package with the carrier of your choice for a value of approximately \$1,000.00 USD.

International Customers are responsible to pay for all customs and duty charges. Instructions on the air bill should indicate this. If not, Active Autowerke has the right to refuse the package, or assess an estimation of the charges and will not release the reprogrammed ECU until payment has been received. Please note, when filling out the commercial invoice, it is advisable to indicate that the ECU is sent to Active Autowerke for repairs only; if not, the duty charges might be assessed at \$1,000.00 USD .